

LTC 8500 Configuration

LTC 8500 Allegiant Matrix Switcher				
No. Inputs	No. Outputs	LTC 8501/60	LTC 8521/00	LTC 8532/00
8	2	1	1	1
8	4	1	1	2
8	6	1	1	3
8	8	1	1	4
16	2	1	2	1
16	4	1	2	2
16	6	1	2	3
16	8	1	2	4
24	2	1	3	1
24	4	1	3	2
24	6	1	3	3
24	8	1	3	4
32	2	1	4	1
32	4	1	4	2
32	6	1	4	3
32	8	1	4	4
40	2	1	5	1
40	4	1	5	2
40	6	1	5	3
40	8	1	5	4
48	2	1	6	1
48	4	1	6	2
48	6	1	6	3
48	8	1	6	4
56	2	1	7	1
56	4	1	7	2
56	6	1	7	3
56	8	1	7	4
64	2	1	8	1
64	4	1	8	2
64	6	1	8	3
64	8	1	8	4

LTC 8600 Configuration

LTC 8600 Allegiant Matrix Switcher				
No. Inputs	No. Outputs	LTC 8601/60	LTC 8621/00	LTC 8834/00
16	4	1	1	1
16	8	1	1	2
16	12	1	1	3
16	16	1	1	4
32	4	1	2	1
32	8	1	2	2
32	12	1	2	3
32	16	1	2	4
48	4	1	3	1
48	8	1	3	2
48	12	1	3	3
48	16	1	3	4
64	4	1	4	1
64	8	1	4	2
64	12	1	4	3
64	16	1	4	4
80	4	1	5	1
80	8	1	5	2
80	12	1	5	3
80	16	1	5	4
96	4	1	6	1
96	8	1	6	2
96	12	1	6	3
96	16	1	6	4
112	4	1	7	1
112	8	1	7	2
112	12	1	7	3
112	16	1	7	4
128	4	1	8	1
128	8	1	8	2
128	12	1	8	3
128	16	1	8	4

LTC 8800 Configuration

LTC 8800 Allegiant Matrix Switcher					
No. Inputs	No. Outputs	LTC 8801/60	LTC 8821/00	LTC 8834/00	LTC 8802/60
32	4	1	1	1	
32	8	1	1	2	
32	12	1	1	3	
32	16	1	1	4	
32	20	1	1	5	
32	24	1	1	6	
32	28	1	1	7	
32	32	1	1	8	
32	36	1	2	9	1
32	40	1	2	10	1
32	44	1	2	11	1
32	48	1	2	12	1
32	52	1	2	13	1
32	56	1	2	14	1
32	60	1	2	15	1
32	64	1	2	16	1
64	4	1	2	1	
64	8	1	2	2	
64	12	1	2	3	
64	16	1	2	4	
64	20	1	2	5	
64	24	1	2	6	
64	28	1	2	7	
64	32	1	2	8	
64	36	1	4	9	1
64	40	1	4	10	1
64	44	1	4	11	1
64	48	1	4	12	1
64	52	1	4	13	1
64	56	1	4	14	1
64	60	1	4	15	1
64	64	1	4	16	1
96	4	1	3	1	
96	8	1	3	2	
96	12	1	3	3	
96	16	1	3	4	
96	20	1	3	5	
96	24	1	3	6	
96	28	1	3	7	
96	32	1	3	8	

LTC 8800 Configuration

LTC 8800 Allegiant Matrix Switcher					
No. Inputs	No. Outputs	LTC 8801/60	LTC 8821/00	LTC 8834/00	LTC 8802/60
96	36	1	6	9	1
96	40	1	6	10	1
96	44	1	6	11	1
96	48	1	6	12	1
96	52	1	6	13	1
96	56	1	6	14	1
96	60	1	6	15	1
96	64	1	6	16	1
128	4	1	4	1	
128	8	1	4	2	
128	12	1	4	3	
128	16	1	4	4	
128	20	1	4	5	
128	24	1	4	6	
128	28	1	4	7	
128	32	1	4	8	
128	36	1	8	9	1
128	40	1	8	10	1
128	44	1	8	11	1
128	48	1	8	12	1
128	52	1	8	13	1
128	56	1	8	14	1
128	60	1	8	15	1
128	64	1	8	16	1
160	4	1	5	1	
160	8	1	5	2	
160	12	1	5	3	
160	16	1	5	4	
160	20	1	5	5	
160	24	1	5	6	
160	28	1	5	7	
160	32	1	5	8	
160	36	1	10	9	1
160	40	1	10	10	1
160	44	1	10	11	1
160	48	1	10	12	1
160	52	1	10	13	1
160	56	1	10	14	1
160	60	1	10	15	1
160	64	1	10	16	1

LTC 8800 Configuration

LTC 8800 Allegiant Matrix Switcher					
No. Inputs	No. Outputs	LTC 8801/60	LTC 8821/00	LTC 8834/00	LTC 8802/60
192	4	1	6	1	
192	8	1	6	2	
192	12	1	6	3	
192	16	1	6	4	
192	20	1	6	5	
192	24	1	6	6	
192	28	1	6	7	
192	32	1	6	8	
192	36	1	12	9	1
192	40	1	12	10	1
192	44	1	12	11	1
192	48	1	12	12	1
192	52	1	12	13	1
192	56	1	12	14	1
192	60	1	12	15	1
192	64	1	12	16	1
224	4	1	7	1	
224	8	1	7	2	
224	12	1	7	3	
224	16	1	7	4	
224	20	1	7	5	
224	24	1	7	6	
224	28	1	7	7	
224	32	1	7	8	
224	36	1	14	9	1
224	40	1	14	10	1
224	44	1	14	11	1
224	48	1	14	12	1
224	52	1	14	13	1
224	56	1	14	14	1
224	60	1	14	15	1
224	64	1	14	16	1
256	4	1	8	1	
256	8	1	8	2	
256	12	1	8	3	
256	16	1	8	4	
256	20	1	8	5	
256	24	1	8	6	
256	28	1	8	7	
256	32	1	8	8	

LTC 8800 Configuration

LTC 8800 Allegiant Matrix Switcher					
No. Inputs	No. Outputs	LTC 8801/60	LTC 8821/00	LTC 8834/00	LTC 8802/60
256	36	1	16	9	1
256	40	1	16	10	1
256	44	1	16	11	1
256	48	1	16	12	1
256	52	1	16	13	1
256	56	1	16	14	1
256	60	1	16	15	1
256	64	1	16	16	1