

Allegiant Commands

FUNCTION	COMMAND	NOTE
System Commands		
Log On	On n ENTER n ENTER	1
Log Off	USER OFF	1
Program Keyboard Memory	MEMORY n ENTER [] ENTER	3
Run Keyboard Memory	MEMORY n RUN	3
Switcher Commands		
Select Camera	n ENTER	
Select Monitor	MONITOR n ENTER	
Request Sequence	SEQUENCE n ENTER	2
Run/Hold	RUN/HOLD	
Direction	PREVIOUS/NEXT	
Lock/Unlock Monitor	MONITOR n LOCK ON/OFF	2
Remote Camera Control Commands		
Lock/Unlock Camera	n LOCK ON/OFF	2
Move Camera	{JOYSTICK}	
Lens Control	{ROCKER SWITCHES}	
Record Position	SET n ENTER	
Recall Position	SHOT n ENTER	
Auxilliary On/Off	ON/OFF n ENTER	
Dither Control	ON/OFF 5 ENTER	
Alarm Control Commands		
Arm/Disarm Camera	ALARM n ON/OFF	
Arm/Disarm All Cameras	USER ALARM ON/OFF	
Acknowledge	ACKNOWLEDGE	2
User Function Commands		
Local Keyboard Test	USER 1 ENTER [] ENTER	
Select Keyboard Beeper On/Off	USER 3 ENTER ON/OFF USER	
Adjust Position of Monitor Overlay	USER 4 ENTER {JOYSTICK} ENTER USER	2
Monitor Display Brightness/Status	USER 5 ENTER {JOYSTICK} ENTER USER	2
Select Monitor Display Option	USER 6 ENTER {JOYSTICK} ENTER USER	2
Set Time	USER 7 ENTER {JOYSTICK} ENTER USER	2
Set Date	USER 8 ENTER {JOYSTICK} ENTER USER	2
Set Camera ID	USER 9 ENTER {JOYSTICK} ENTER USER	2
Select Time/Date Format	USER 11 ENTER {JOYSTICK} ENTER USER	2
Print System Configuration Tables	USER 13 ENTER {JOYSTICK} ENTER USER	2
Reset System	USER 15 ENTER n ENTER	2
Time Event Enable/Disable	USER 16 ENTER {JOYSTICK} ENTER USER	2
Print Sequence	USER 18 ENTER {JOYSTICK} ENTER USER	2
Designate Alarm Monitor Type	USER 21 ENTER {JOYSTICK} ENTER USER	2
Display CPU Software Version Number	USER 23 ENTER	

NOTE INDEX:

1. This function is available only if selected by the system installer.
2. Access to this function is based on USER priority level.
Refer to the appropriate section of the operating instructions for more information.
3. This function is not applicable to the LTC 8554/00 and TC8555 keyboards.