


## Installing Hard Drives in a System4 Server EP

To prevent damage during shipping, the hard drives for your System4 Server have been packaged separately from the chassis. The drives **MUST** be installed in their correct slots for the system to work properly. Each drive is labeled with a number from 1 up to 8; the number indicates the slot in which to insert the drive. The first diagram shows a System4 Server when you first unlock and open the door:

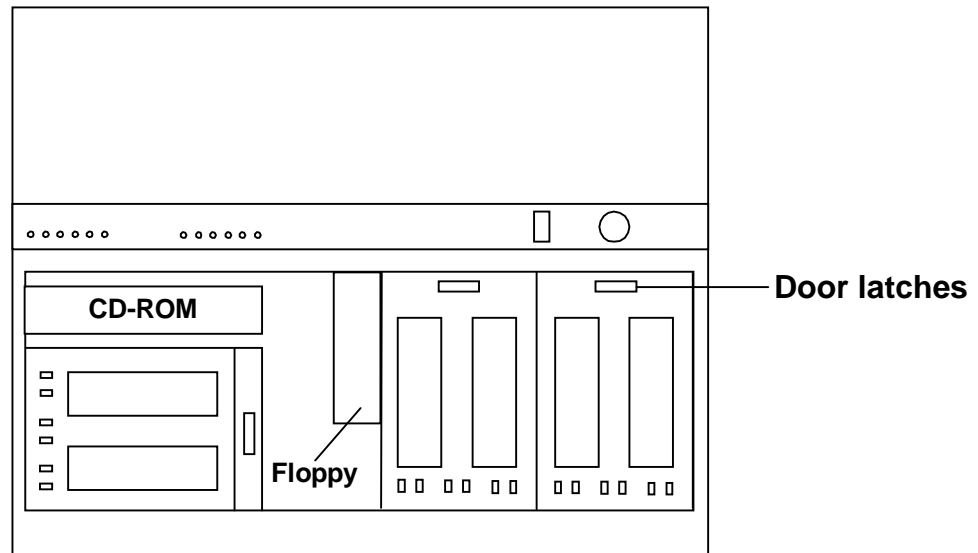

1. To expose the slots, open the far-left drive bay door by moving its latch down and swinging the door to the left. The first door covers slots 1 through 3 (see diagram below). The slots are identified by a sticker.
2. Insert drive 1 into slot 1. To insert a drive, hold it so that the bottom (the grated side) is parallel to the floor and the handle is pointing toward you. Insert the drive all the way into the slot until it locks into place.
3. Insert drive 2 into slot 2 and drive 3 into slot 3 (the same way you inserted drives 1 and 2).
4. Open the next drive bay door from the left by moving its latch to the right and swinging the door downward. Insert drives 4, 5, and 6 into the slots as numbered in the diagram below. To insert a drive, hold it so that the bottom (the grated side) is to the right and the handle is pointing toward you. Insert the drive all the way into the slot until it locks into place.
5. Open the remaining drive bay door. Insert drives 7 and 8 into the slots as numbered in the diagram below. These drives are installed in the same manner as drives 4, 5, and 6.
6. Activate drives 1, 2, and 3 by inserting the key into each slot with the notch in the 6 o'clock position, and then rotate the notch to the 9 o'clock position. Activate drives 4 through 8 by inserting the key with the notch in the 3 o'clock position and rotate to the 6 o'clock position.

